

Plug-In Lamp Module (UK Type)



Technical Specifications:

- Rated Voltage: 230VAC +/-10%, 50Hz
- Incandescent Load: ≤600W
- Standby Power: ≤ 1W
- Operating Temp: -10 to 50 degC

Features:

- Allow local and remote X10 controls.
- Electronic Address Code settings (< 6 seconds).
- Allow remote control using any X10 controllers, e.g. wireless remotes (e.g. #4059), telephone transponder (e.g.# 5010), PC (e.g. #1140), etc.
- Respond to X10 ON/OFF, All Lights ON/All Units OFF commands.
- High X10 signal sensitivity (25mV).
- Built-in noise filter.
- Compatible with standard UK plug type.

Setup

Simply plug the module onto an existing power point and plug the incandescent lamp onto it.

Address Setting:

- Press and hold 'Setup' button for **5 seconds**.
- When the indicator flickers, release the 'Setup' button.
- At the time, the lamp will turn ON and you are now in the programming mode.
- Use any X10 controller, e.g. #4034, and transmit the X10 address you want this module to respond to, e.g. B2-ON.
- When the lamp goes off, the module's address is set.

(If there is no operation within 30 seconds, the module will exit the programming mode.)

Operation:

- When an incandescent lamp is plugged onto this module, it can be controlled using any X10 controller or locally via the ON/OFF button on the module.
- Simply press the ON/OFF button on the module to toggle between ON and OFF states or send an X10 command to it.
- Using an X10 controller, this module can also respond to the X10 Bright/Dim command.

Application:

- Control this module remotely using any X10 wireless remote within having to leave your comfortable sofa!
- Integrate this module in your scene controls/macros or use it in conjunction with your X10 compatible security systems, e.g. automatically turn on when alarm triggered or as 'live-in' security simulation.

Trouble-shooting:

If your receiver module does not respond to an X10 commands, please check the following:

- Power is supplied to the module and the address setting on controller corresponds to the address setting on the module.
- Your X10 controller is powered on or your remote's battery is not weak and the r.f. transceiver is connected on the same ac phase as this module.
- Check to see if the fuse is blown.

(If the above doesn't work, it may be the module is faulty or there is excessive interference in the power line. Please refer to our website for additional help.)