

## 4 Address Micro Remote (433)

- 10 buttons X10 compatible radio frequency micro remote.
- 4 pairs of X10 On/Off addresses
- 1 pair of bright/dim buttons.
- Works with standard X10 RF Base Transceiver.



## Technical Specifications

- ◆ Frequency: 433.92MHz
- ◆ Range: Max 50m
- ◆ Batteries: 2 x 3V button battery (CR2016)
- ◆ Dimension: 90x42x6mm
- ◆ Color: Black

## Features

- On/Off control for appliances and lights.
- Bright/Dim control for Incandescent/Halogen lights.
- All Lights ON/All Units OFF.
- Compatible with any X10 receiver.
- Programmable address code

## X10 Address Codes

The X10 Address Code comprises of House Codes (A to P) and Unit Codes (1 to 16). Generally, the House Codes are used for zoning purposes and the Unit Codes are used to define the modules within this zone.

For example, if a button on this remote is set to address "D8", the On/Off button on the remote will control all X10 devices with address D8. The All Lights ON/All Units OFF commands will affect only one House Code at a time.

**(This remote does not support All Lights ON/All Units OFF commands)**

## Address Set-Up

### To Change the House Code:

Press and hold "1 ON" key for 5 seconds, when the indicator started to flash, release the button.

The number of flashes indicates the original House Code's setting. For example, if original House Code is '3', the indicator will flash three times; if original House Code is 6, the indicator will flash six times, etc.

- To change this House Code, **press and let go the "1 ON" button several times corresponding to the House Code you want to set.**
- On the last press, **hold the button for 3 seconds** until the indicator light flashes the number of times corresponding to the House Code. This confirms that the House Code has been correctly set.

For example, press three times if you want the House Code to be 'C'. On the third press, hold for 3 seconds, and when the indicator lights flashes three times as confirmation, the remote has been set for House Code 'C'.

**(Note that this remote can only be set to one House Code at any one time.)**

### To Change the Unit Code:

Press and hold the "1 OFF" button for 3 seconds. When the indicator flickers, release the button. The number of flickers indicates the original Unit Code's setting. For example, if original Unit Code is '3', the indicator will flashes three times; if original Unit Code is 6, the indicator will flashes six times, etc.

- To change this Unit Code, **press the "1 OFF" button several times corresponding to the Unit Code you want to set, and hold the button for 3 seconds on the last press.**
- For example, press six times if you want the Unit Code to be '6', and on the sixth press, hold for 3 seconds until the indicator lights flashes 6 times to confirm this setting.

**(Note: If the House and Unit Code is set to start at ' C6', then the next three pairs of buttons will be automatically set to 'C7', 'C8' and 'C9', etc.,**

## Exit Set-Up Mode

While in the Set-Up mode, if no button is pressed for 8 seconds, the module will automatically exit this mode.

## Operation

- Press left buttons to turn ON and right side buttons to turn OFF.
- Press and hold the "Dim" for three seconds to dim, and press and hold "Bright" for three seconds to brighten.

**(Note that the Bright/Dim is only application for incandescent and halogen lights.)**