



# PLCBUS Receiver Module


## PLCBUS-2026UK/AU/G Lamp Plug-in Module

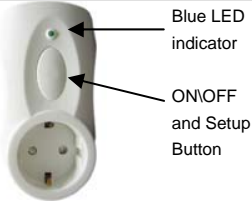

PLCBUS-2026G

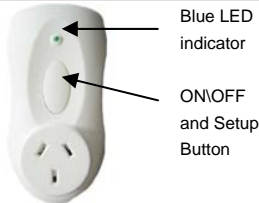

PLCBUS-2026AU

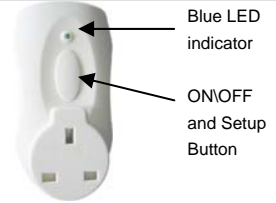

PLCBUS-2027UK

## Setup Manual

### Setup Main Address

1. Plug the lamp into the Module.
2. Plug the Module into a wall outlet.
3. Press "Setup" button and hold for 5 seconds, the lamp which plug into the module will turn on and the blue LED indicator will blink. Release "Setup" button now, and use your Mini-Controller to send an address signal, the lamp which plug into the module will turn OFF. That mean you have assign a PLCBUS address to this plug-in module successfully.
4. Now , you are able to control the plug-in module with any PLCBUS Controllers. It is also possible to control the Module locally. Just press the button on the plug-in module to switch the loading ON and OFF.

## Technical Specification

- Support 2 way communications. (ON/OFF status report , Dim Level report)
- Respond to PLCBUS "ON" , "OFF" , "All Lights ON" , "All Units OFF" , Bright and Dim command
- Plug-in module have 1 main address and 16 Scene Address
- Supply voltage : 230V±10%/50Hz
- Power : 600W / 2.5A max
- Load Type : Incandescent lamps only
- Dimensions : 110 x 60 x 35mm